

UGPH75, UGPHC75 Uphill Grout Hog® Owner's Manual

Serial Number _____



Before using this **Grout Hog®**, study and understand entire Owner's Manual.



W A R N I N G S

1. The **Grout Hog®** is a material delivery system and is not intended for any other use.



2. Make sure anyone operating the **Grout Hog®** is thoroughly familiar with its operation. Keep all unauthorized and untrained personnel, especially children, away from **Grout Hog®**.

3. Consult forklift manufacturer's specifications to insure load capacity is not exceeded.

Model	Empty Weight	Max. Gross Weight
UGPH75	1475 lbs. (669.0 kg)	4475 lbs. (2029.8 kg)
UGPHC75	1565 lbs (709.8 kg)	4565 lbs. (2070.6 kg)

Do not exceed Maximum Gross Weight

4. Always use skid pins and lynch pins or safety chains whenever **Grout Hog®** is on lift forks.



5. Never run machine with end cap removed.



6. Stay clear of auger while machine is running. Keep all body parts, solid objects, clothing, and jewelry away from all moving parts.



7. Always confirm spring loaded Pivot Latch has hopper securely locked before using or cleaning.

8. Never perform any work on the **Grout Hog®** while it is running. Before working on the Grout Hog®, remove from forklift, turn off ignition on Honda engine, and disconnect battery cable to prevent accidental starting.



9. Avoid breathing exhaust gasses and dust produced while using the **Grout Hog®**.



10. Avoid contact with hot hydraulic fluid. Allow system to cool before performing any repairs or services.

11. Never stand under an elevated **Grout Hog®**.

12. Never ride the **Grout Hog®**.

13. Use only factory authorized parts.

14. Never operate the **Grout Hog®** under the influence of alcohol, drugs, or medications.

15. Inspect all hoses for nicks, cuts or damage before each use. Replace if damaged.

16. Only lift **Grout Hog®** from lifting channels or crane bail if equipped.



17. Always wear approved safety glasses, hearing protection, and hard hats when operating or servicing a **Grout Hog®**.

18. The **Grout Hog®** is intended for use with a supervised hold to run control. If used outside of this scope call the **EZ Grout Corporation** for optional grate to cover hopper.

19. Do not use the **Grout Hog®** as a lifting device.

20. The disposal of used lubricants or hazardous materials must comply with all governmental, national and local, regulations.

Warning: California - Proposition 65

Engine exhaust and some of its constituents, and some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects and other reproductive harm. Some examples of these chemicals are:

Lead from lead based paints - Crystalline silica from bricks -Cement and other masonry products -Arsenic and chromium from chemically treated lumber Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: ALWAYS work in a well ventilated area, and work with approved safety equipment, such as dust masks that are specially designed to filter out microscopic particles.



Grout Hog®
Grout Delivery System
EZ Grout Corporation

EZ Grout Corporation
405 Watertown Road
Waterford, Ohio 45786

(740) 749-3512 or 1-800-417-9272

Fax (740) 749-0602

www.ezgrout.com

Operating Instructions

1. Rotate hopper to upright position.

Warning: Verify spring loaded Pivot Latch has hopper securely locked before operating.

2. Start engine (see Honda owner's manual). Let engine run for 5 minutes and turn off.

3. Slide lift forks into lifting channels on **Grout Hog®**

4. Insert skid pins into lift channels behind lift forks and secure with locking pins or use chain attachment.

5. Set **Grout Hog®** securely on ground. Fill to desired capacity.



CAUTION: Check forklift or crane manufacturer's specifications to be sure forklift or crane is designed to handle weight of **Grout Hog®** and material in hopper.

Model	Empty Weight	Max. Gross Weight
UGPH75	1475 lbs. (669.0 kg)	4475 lbs. (2029.8kg)
UGPHC75	1565 lbs. (709.8 kg)	4565 lbs. (2070.6 kg)

Do not exceed Maximum Gross Weight

6. Transport **Grout Hog®** to desired location, start engine, open throttle fully, and raise above grouting level.

7. Hold discharge hose over area to be grouted.

8. Push button on pendent for forward rotation of auger.

9. Discharge grout to desired areas until hopper is empty. (Repeat steps 5-9 as needed.)

10. To regulate grout flow, squeeze discharge hose; to momentarily stop grout flow, crimp or fold hose.

11. To stop grout flow for extended period, release button on pendent and hang on provided hook.

Note: When not in use, store Grout Hog® in tilted position with end cap removed to prevent water from accumulating in the hopper.

Note: Following each use, it is a good idea to apply a thin layer of lubricant inside the hopper to make cleaning easier. **CAUTION: Do not use so much lubricant that it might stain blockwork at beginning of next use.** If equipped with crane bail inspect bail, hopper, and base for cracked welds, loose bolts, and wear before each use. Repair or replace if needed.

Obtaining Spare Parts

Spare parts for your **Grout Hog®** may be obtained by the following procedure:

1. Record the information from the serial number tag located on the lower left rear side of your **Grout Hog®**
2. Using the parts reference table in this manual, record part number and component.
3. Contact your local **Grout Hog®** dealer or **EZ Grout Corporation** at 800-417-9272 with the information in Steps 1 and 2.



Warning Decals - for your safety and the safety of others, replace any damaged or missing decals by contacting the manufacturer at 800-417-9272.

Cleanup

1. Set **Grout Hog®** firmly on level ground. Turn off forklift and remove ignition key. Turn off Honda engine and remove key. Remove skid pins or chain before backing away.

2. Pull spring loaded locking pin on side of hopper and rotate over the release bracket.

3. Firmly grasp the Secondary Pivot Latch Handle, pull to unlock, and lift to dump hopper.

Warning: Verify spring loaded Pivot Latch has hopper securely locked before cleaning.

4. Remove end cap with provided speed wrench. Firmly grasp auger handle and pull auger out of tube.

5. Unlatch auger tube section and rotate upward for better access to clean tube. Wash out and brush down tube, hopper, auger, and end cap.

Note: Be sure to clean all debris from inside the auger drive end.

6. Flush hose until clean.

7. Slide auger back into place over the power shaft connector. Replace end cap on tube.

8. Pull locking pin and rotate hopper to the upright position.

Maintenance

1. Make sure **Grout Hog®** is clean after each use (see "Cleanup").

- 2 Grease fittings before each use.

Use EPI GC-LB Rated or equivalent grease.

Maintenance Chart

		First 100 Hours	After Use	Before Starting Motor	Every Time After Refilling	Before Starting Work	Monthly	Annually or 500 Hours	In The Event Of Malfunction	If Damaged	Refer To Honda Owners Manual Supplied with Machine
Complete Machine	Visual Inspection Condition			X	X						
	Clean		X	X							
Hydraulic Filter	Replace	X						X		X	
Hydraulic Oil (5-10W/energul HPD-HD or equivalent)	Check			X							
	Replace	X						X			
Honda Motor	Maintenance Repair & Safety										X
Hydraulic Hoses & Discharge Hose	Replace							X	X		
	Check			X							
Auger	Replace								X		
	Clean		X								
Warning Decals	Replace								X		
	Clean		X		X						
Emergency Stop	Functional Test				X						
	Replace							X	X		
Pendant Switch	Functional Test				X						
	Replace							X	X		
End Cap & Rear Seal	Grease		X	X	X						
	Replace							X	X		
Center Spindle	Grease					X					
Battery	Replacement										X

Grout Hog® Troubleshooting Guide


Symptom

Potential Cause

Possible Solution

Auger will not turn	Low hydraulic fluid	Add hydraulic fluid
	Hard concrete around auger	Clean auger
	Ice in hopper	Clean hopper
	Discharge hose plugged	Clean hose
	Pendent or cord Damaged	Inspect, Replace if needed
	Blown Fuse	Replace Fuse
	Dead Battery	Charge or replace
Hopper unloading slowly	Discharge hose kinked	Lift hopper to higher elevation
	Discharge hose damaged	Replace discharge hose
	Auger turning in reverse	Press other hold to run button on pendent
	Auger worn	Replace auger
Concrete leaking from back of machine	Continuous use with lack of grease	Replace seal kit on back of hopper
Hopper is difficult to swivel by pulling on discharge hose	Lack of Grease	Grease spindle
	Faulty support rollers	Replace support rollers

Warning labels / locations.

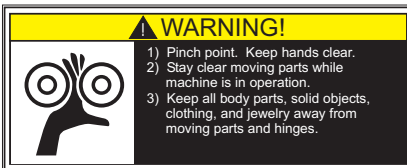


Pinch Label: located on back of hydraulic motor guard.




Heat Label: located on tank and hood.

Large Multi Warning Label: located on back of hopper

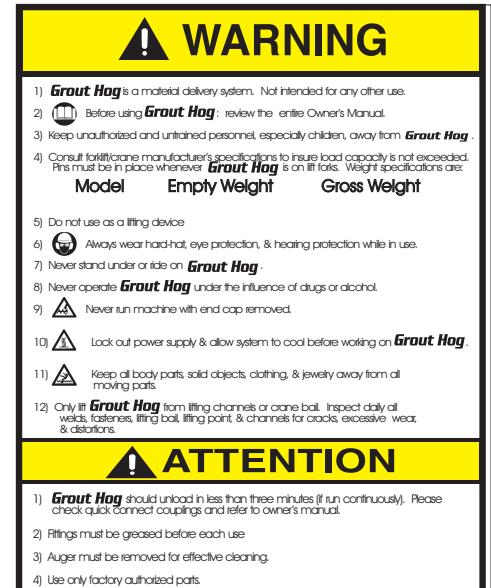

End Cap Label: located on discharge snout

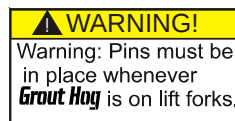

Pin Label: located on Fork Pockets



Amputation Label: located on back of hopper

Limited Warranty

The manufacturer warrants that products manufactured shall be free from defects in material and workmanship that develop under normal use for a period of one year on all products from the date of shipment. The foregoing shall be the exclusive remedy of the buyer and the exclusive liability of the manufacturer. Our warranty excludes normal replaceable wear items, i.e. gaskets, wear parts, seals, O-rings, belts, drive chains, clutches, etc. Any equipment, part or product which is furnished by the manufacturer but manufactured by another, bears only the warranty given by such other manufacturer. (Manufacturer agrees to furnish free of charge a written description of problem or cause.) Warranty is voided by product abuse, alterations, use of equipment in applications for which it was not intended, use of non-manufacturer parts, or failure to follow documented service instructions. The foregoing warranty is exclusive of all other warranties whether written or oral, expressed or implied. No warranty of merchantability or fitness for a particular purpose shall apply. The agents, dealers, and employees of Manufacturer are not authorized to make modifications to this warranty, or additional warranties binding on the Manufacturer. Therefore, additional statements, whether oral or written, do not constitute warranty and should not be relied upon.

The Manufacturer's sole responsibility for any breach of the foregoing warranty provisions, with respect to any product or part not conforming to the

Warranty or the description herein contained, is at its option (a) to repair, replace, or refund such product or parts upon the prepaid return thereof to location designated specifically by the Manufacturer. Product returns not shipped prepaid will be refused (b) As an alternative to the foregoing modes of settlement - the Manufacturer's dealer may repair defective units with reimbursement for expenses. A written description of problem or cause must accompany all warranty claims.

Except as set forth here in above and without limitation of the above, there are no warranties or other affirmation which extend beyond the description of the products on the fact here of, or as to operational efficiency, product reliability, or maintainability or compatibility with products furnished by others. In no event, whether as a result of breach of contract or warranty or alleged negligence, shall the Manufacturer, be liable for special or consequential damages including but not limited to: Loss of profits or revenue, loss of use of the product or any associated product, cost of capital, cost of substitute products, facilities or services or claims of customers. Manufacturer does not assume responsibility for any accident due to equipment modification.

No claim will be allowed for products lost or damaged in transit. Such claims should be filed with the carrier within fifteen days.

Effective July 20, 2005

En caso de incumplimiento de las disposiciones de esta garantía, en lo que respecta a cualquier producto o pieza que no cumpla con la garantía o la descripción incluida en la presente, el fabricante tendrá como única responsabilidad la opción de (a) reparar, o

No se aceptará ningún reclamo por productos extraviados o dañados en tránsito. Tales reclamos se deberán presentar ante el transportista dentro de un plazo de quince días.

Excepto por las disposiciones estipuladas anteriormente y sin limitarse a las mismas, no habrá otras garantías o compromisos con alcance mayor que el de la descripción de los productos

El fabricante garantiza que sus productos estarán libres de defectos en los materiales y en la mano de obra bajo condiciones de uso normal durante un lapso de un año con-

Garantía limitada

Etiqueta del tapón terminal: ubicada en la boquilla de descarga

Nunca haga funcionar la máquina sin el tapón terminal.

PELIGRO

Etiqueta de punto de presión: ubicada en la parte posterior de la guarda del motor

PELIGRO

1) Punto de presión. No introduzca las manos.
2) Manténgase alejado de la pieza en movimiento cuando la máquina esté funcionando.
3) Mantenga alejados todos las partes del cuerpo, objetos sólidos, prendas de vestir o joyas de las piezas en movimiento y de bisagras.

Etiqueta de clavija: ubicada en los compartimiento de las horquillas

Advertencia: Las clavijas deben estar en su sitio cuando la máquina *grout Hog* se encuentre en las horquillas del montacargas.

PELIGRO

Etiqueta de calor: ubicada en el tanque y sobre el capó

PELIGRO

ADVERTENCIA!

SUPERFICIE CALIENTE. NO TOCAR.

Etiqueta de amputación: ubicada en la parte posterior de la tolva

PELIGRO

RIESGO DE AMPUTACIÓN

BARRENA QUE GIRA

Mantenga las manos y cuerpo lejos de la tolva

Etiqueta grande con varias advertencias: ubicada en la parte posterior de la tolva

ADVERTENCIA!

1) *Grout Hog* es un sistema de descarga de material. No está diseñado para ningún otro uso.

2) Antes de usar el *grout Hog* lea todo el manual del usuario.

3) Mantenga a todo el personal no capacitado y a las personas no autorizadas especialmente los niños, alejados del alcance de la máquina *grout Hog*.

4) Consultar las especificaciones del fabricante del montacargas de horquilla o de la grúa en su sitio cuando la máquina *grout Hog* se encuentre en las horquillas del montacargas. Las especificaciones de peso son:

Modelo	Peso en vacío	Peso bruto

5) No utilice la máquina como un aparato de elevación.

6) Nunca se coloque debajo o se desplace montado en la máquina *grout Hog*.

7) Nunca se coloque debajo o se desplace montado en la máquina *grout Hog* las drogas.

8) Nunca trabaje con el *grout Hog* mientras usted esté bajo los efectos del alcohol o las drogas.

9) Nunca haga funcionar la máquina sin el tapón terminal.

10) Desconecte el suministro de energía y deje que el sistema se enfríe antes de trabajar en la máquina *grout Hog*.

11) Mantenga alejadas todas las partes del cuerpo, objetos sólidos, prendas de vestir o joyas de las piezas en movimiento de la máquina.

12) Levante la máquina *grout Hog* solo por los canales de elevación o los canales en las soldaduras, abrazaderas, gancho de elevación, punto de elevación y los canales. No desajuste directamente de que no haya grietas, desgaste excesivo o distorsiones.

ATENCIÓN

1) La máquina *grout Hog* debe descargarse en menos de tres minutos (si funciona de manera continua). Si se revisa los acoples de conexión rápida y consulte el manual del propietario.

3) Los adaptadores deben engrasarse antes de cada uso.

3) La barrera se debe eliminar para realizar la limpieza de manera efectiva.

4) Utilice solo piezas autorizadas por el fabricante.

Etiquetas de advertencia / ubicaciones

La barra no gira	Poco fluido hidráulico	Hay hornión endurecido alrededor de la barra	Limpie la barra	Limpie la tolva	Manguera de descarga obstruida	Limpie la manguera	Daños en el interruptor colgante o en el cable	Inspeccione y cambie si es necesario	Cambie el fusible	Batería descargada	La manguera de descarga está doblada	Coloque la tolva en una posición más elevada	Cambie la manguera de descarga	Presione el otro botón de arranque remoto en el interruptor colgante	La barra está girando hacia atrás	La barra está desgastada	Usos prolongados con insuficiente lubricación	Falta de lubricación	Rodillos de soporte defectuosos	Cambie los rodillos de soporte
La tolva descarga lentamente																				
Es difícil hacer girar la tolva tirando de la máquina																				
Salte hornión de la parte posterior de la máquina																				
descarga																				

Posible solución

Posible causa

Guía para la solución de problemas de la máquina Grout Hog®

Problema

ELEMENTO	NÚMERO DE PIEZA	CANTIDAD	DESCRIPCIÓN	ELEMENTO	NÚMERO DE PIEZA	CANTIDAD	DESCRIPCIÓN	ELEMENTO	NÚMERO DE PIEZA	CANTIDAD	DESCRIPCIÓN
1	UGH-A-10	1	Barrena	31	15-102	1	Semiacoplamiento del motor	49	09-308	4	Perno de 3/8 de pulg.-16 x 1 1/2 pulg.
2	11-119	1	Pistola engrasadora	32	14-103	1	Motor Honda®	50	02-415	1	Motor hidráulico
3	GH-A-6	1	Llave de velocidad	33	UGPH-16	1	Placa de aislamiento del motor (doblada)	51	UGPH-11	1	Protector para motor hidráulico
4	11-108	1	Cepillo limpiador	34	02-803	4	Montajes para vibración	52	09-308	4	Perno de 3/8 de pulg.-16 x 1 1/2 pulg.
8	UGH-A-11	1	Tubo retirable de 3/8 de pulg.-16	35	09-305	2	Perno de 5/16 pulg.-18 x 2 pulg.	53	02-634	1	Cartucho de alivio bidireccional
9	09-206	2	Tuerca cuadrada de 3/8 de pulg.-16	37	UGH-A-13	2	Clavija de giro de la tolva	54	02-603	1	Cartucho de alivio/múltiple
10	09-214	2	Tuerca de brida de 3/8 de pulg.-16	38	UGH-A-2	1	Tolva	55	09-338	4	Perno de 5/16 pulg.-16 x 2 pulg. SHCS
11	09-339	2	Perno sin fin de 3/8 de pulg. x 2 pulg.	39	09-305	4	Perno de 5/16 pulg.-18 x 2 pulg.	56	02-625	1	Válvula hidráulica de solenoide
12	UGH-A-12	1	Tapón terminal con casquillo	40	GH-27	1	Anillo de soporte del sello interno	56A	02-633	1	Bobina de la válvula hidráulica de solenoide
12A	15-145	1	Casquillo del tapón terminal DE 2 3/8 pulg.	41	13-116	3	Sello de uretano	57	09-307	4	Perno de 3/8 de pulg.-16 x 1 pulg.
13	12-100	2	Abrazadera de la manguera	42	GH-17	2	Anillo separador	58	09-204	4	Contratuercas de nylon de 3/8 de pulg.-16
14	12-105	8	Manguera de descarga (por pie)	43	GH-18	1	Anillo de soporte del sello exterior	59	UGH-11	2	Retén de giro de la tolva
18	13-102	1	Disco de goma de control	44	09-202	4	Contratuercas de nylon de 5/8 de pulg.-18	60	UGPH-A-1	1	Base de giro de la tolva
				45	GH-A-25	1	Conector del eje de potencia	61	09-421	2	Clavija de rodillo de 3/4 x 1 3/8 pulg.
				46	GH-A-26	1	Juego de sellos posteriores (incluye (4) 09-305, (1) GH-27, (3) 13-116, (2) GH-17, (1) GH-18, (4) 09-202 y (1) GH-A-25)	62	09-812	1	Resorte de cerrojo
				47	GH-A-13	1	Placa del motor	63	UGH-8	1	Placa de retención de cerrojo
				48	09-205	4	Contratuercas de nylon de 3/8 de pulg.-16	64	09-301	3	Perno de 1/2 de pulg.-20 x 1 pulg.
								65	UGH-A-7	1	Cerrojo de pivote
								66	09-327	1	Perno grado 8 de 1 x 8 pulg.
								66A	09-407	2	Pasador con anillo abatible de 5/16 pulg.
								67	09-213	1	Contratuercas de nylon de 1 pulg.
								68	15-109	4	Rodillo de leva
								69	09-319	4	Perno de 3/8 x 2 1/2 de pulg.
								70	09-210	4	Contratuercas de nylon de 3/8 de pulg.
								71	GH-A-2	1	Base deslizante
								72	09-329	2	Perno grado 8 de 3/4 x 1 1/2 pulg.
								73	09-113	2	Arandela de bloqueo de 3/4 de pulg.
								74	GH-521	2	Clavijas deslizantes
								75	GH-A-40	1	Ensamblado de clavija de freno
								76	UGPH-A-5	1	Manguera hidráulica desde el tanque hasta bomba
								77	UGPH-A-6	1	Manguera hidráulica desde la bomba hasta la válvula
								78	UGPH-A-7	1	Manguera hidráulica desde la válvula hasta el tanque
								79	09-400	2	Sujetador de chaveta
								80	09-361	2	Perno de reborde de 3/8 de pulg.
								81	09-813	2	Resortes de compresión
								82	09-216	2	Tuerca de cubo de 5/8 de pulg.
								83	UGPH-A-9	2	Asa de cerrojo con pivote secundario
								84	UGPH-A-13	1	Juego de gancho de grúa
								85	13-115	1	Guardapolvos
								86	GPH-12	2	Placa de montaje de gancho de grúa superior
								87	GPH-13	2	Placa de montaje de gancho de grúa inferior
								88	20-100	1	Asa de sujeción

Wiring Diagram: Shows the electrical connections for the motor. It includes a power source (M2), a switch, and a fuse. The wiring is color-coded: Blanco (White), Negro (Black), and Rojo (Red). The diagram shows the connection between the motor and the control switch.

Hydraulic Schematic: Shows the flow of hydraulic fluid through the system. It includes a pump (P), a tank (T), and various valves and hoses. The schematic shows the connection between the pump and the hydraulic cylinder, and the return flow to the tank.

UGPH75, UGPHC75

UpHill GROUT Hog®

Manual del propietario



ADVERTENCIAS

Lea y revise detenidamente el manual del propietario antes de usar la máquina GROUT Hog®.



Número de serie: _____

1. GROUT Hog® es un sistema de descarga de material y no está diseñado para ningún otro uso.
2. Asegúrese de que cualquier persona que maneje la máquina GROUT Hog® conozca bien su funcionamiento. Mantenga a todo el personal no capacitado y a las personas no autorizadas, especialmente a los niños, alejados de la máquina GROUT Hog®.
3. Consulte las especificaciones del fabricante del montacargas de horquilla para asegurarse de no exceder la capacidad de carga.



9. Evite respirar los gases de escape y polvo que se producen al utilizar la máquina GROUT Hog®.
10. Evite el contacto con el fluido hidráulico caliente. Deje enfriar el sistema antes de realizar cualquier reparación o tarea de mantenimiento.
11. Nunca se coloque debajo de la máquina GROUT Hog® cuando esté elevada.
12. Nunca se desplace montado sobre la máquina GROUT Hog®.
13. Sólo utilice piezas autorizadas por el fabricante.
14. Nunca trabaje con la máquina GROUT Hog® mientras usted esté bajo los efectos del alcohol, drogas o medicamentos.
15. Antes de cada uso, asegúrese de que ninguna manguera tenga muecas, cortes ni esté dañada. Cambie las que estén dañadas.
16. Levante la máquina GROUT Hog® sólo por los canales de elevación o el gancho de la grúa, si viene incluido.
17. Utilice siempre gafas de seguridad aprobadas, protectores para los ojos y cascos de seguridad para hacer funcionar o realizar tareas de mantenimiento en la máquina GROUT Hog®.
18. La máquina GROUT Hog® está diseñada para funcionar con un control de arranque remoto su- pervisado. Para un uso distinto a éste, comuníquese con EZ GROUT Corporation a fin de obtener una rejilla opcional que cubra la tolva.
19. No utilice la máquina GROUT Hog® como un aparato de elevación.
20. El desecho de lubricantes usados o materiales tóxicos debe cumplir con todos los reglamentos gubernamentales, nacionales y locales.



4. Siempre use clavijas deslizantes y pasadores con anillo abatible o cadenas de seguridad cada vez que la máquina GROUT Hog® esté montada sobre un montacargas de horquilla.
5. Nunca haga funcionar la máquina sin el tapón terminal.
6. Manténgase alejado de la barrena cuando la máquina esté funcionando. Mantenga alejadas todas las partes del cuerpo, objetos sólidos, prendas de vestir o joyas de las piezas en movimiento.
7. Asegúrese siempre de que el pasador del pivote ac- cionado por resorte tenga la tolva bloqueada firmemente antes de usar o limpiar la máquina.
8. Nunca realice ningún trabajo sobre la máquina GROUT Hog® mientras esté funcionando. Antes de trabajar sobre la máquina GROUT Hog®, quite la del montacargas de hor- quilla, apague el encendido del motor Honda y desconecte el cable de la batería para evitar que la máquina arranque accidentalmente.



Modelo	Peso en vacío	Peso bruto máximo
UGPH75	669,0 kg (1475 lb)	2029,8 kg (4475 lb)
UGPHC75	709,8 kg (1565 lb)	2070,6 kg (4565 lb)

No debe excederse el peso bruto máximo

Advertencia: California – Propuesta 65

El escape del motor y algunos de sus componentes, además de algunas partículas de polvo generadas al lijar, serruchar, esmerilar, taladrar mecánicamente y durante otras actividades de la construcción, contienen productos químicos que en el estado de California se ha determinado que producen cáncer, malformaciones congénitas y otras lesiones en el aparato reproductivo. Algunos de estos productos químicos son: Plomo contenido en las pinturas con base de plomo - sílice cristalino de los ladrillos - cemento y otros productos de albañilería - arsénico y cromo de madera con tratamiento químico. El riesgo debido a la exposición a estos productos químicos varía según la frecuencia de realización de este tipo de trabajo. Para reducir el riesgo de ex- posición a estos productos químicos: SIEMPRE trabaje en un sitio bien ventilado y usando los equipos de seguridad aprobados, tales como mascarar para el polvo diseñadas específicamente para filtrar las partículas microscópicas.



EZ GROUT Corporation
405 Watertown Road
Watertown, Ohio 45786
Teléfono: (740) 749-3512 ó 1-800-417-9272
Fax (740) 749-0602
www.ezgrout.com