



Before using this Grout Hog®,  
study and understand entire  
Owner's Manual.

Serial Number \_\_\_\_\_



# **GPH75 & GPHC75**

## **Grout Hog®**

### **Owner's Manual**



**Grout Hog®**  
**EZG MANUFACTURING**  
**1-800-417-9272**

**EZG Manufacturing**  
**405 Watertown Road**  
**Waterford, Ohio 45786**  
**(740) 749-3512 or 1-800-417-9272**  
**Fax (740) 962-2037 [www.ezgmfg.com](http://www.ezgmfg.com)**

# TABLE OF CONTENTS

INTRODUCTION.....	3
ABOUT THIS MANUAL.....	3
GENERAL INFORMATION.....	3
SAFETY INFORMATION.....	3
SAFETY PRECAUTIONS.....	4-5
CALIFORNIA PROPOSITION 65 WARNING.....	6
OPERATING INSTRUCTIONS.....	6
CLEANUP.....	7
OBTAINING SPARE PARTS.....	7
TROUBLE SHOOTING GUIDE.....	8
MAINTENANCE CHART.....	8
SERVICE RECORDS.....	9
WARNING LABELS AND LOCATIONS.....	10
ASSEMBLY DRAWING P.1.....	11
ASSEMBLY DRAWING P.2.....	12
PARTS LIST.....	13
ENGINE ASSEMBLY.....	14
SEAL KIT.....	15
OPTIONS.....	16
NOTES.....	17
WARRANTY.....	18
WARRANTY REGISTRATION.....	19

# INTRODUCTION

Congratulations on purchasing one of the finest pieces of masonry equipment on the market today! If this is your first EZG Manufacturing product, you will not be disappointed. If you have previously owned an EZG Manufacturing product you will find the same high quality and dependability that you have come to expect from EZG Manufacturing.

## ABOUT THIS MANUAL

The purpose of this manual is to inform the owner/employer/and the operator, how to safely operate this piece of equipment, and make them aware of any hazards. It also contains important information regarding assembly, set up, operation, and maintenance. It is the Owner/Employers responsibility to make sure that anyone who operates this machine understands all safety warnings. If you do not understand any items in this manual, please contact the dealer where this product was purchased, or the manufacturer at the number listed throughout this manual. If you have any suggestions about how to make this manual easier to understand, contact the manufacturer. Keep this manual available for reference wherever this piece of equipment is being used and make it available to any operators.

## GENERAL INFORMATION

Illustrations in this manual may show details or components that may not be the same as your machine. Continuing improvements to the design of this machine may have caused changes that are not included in this manual. The information in this document is subject to change without notice.

## SAFETY INFORMATION

The following safety symbols and signal words will be used throughout this manual and on the product, for your safety and the safety of others, please become familiar with their meaning and heed their warnings.



**This symbol, either used alone or with a signal word, is used to call your attention to instructions involving your safety and/or the safety of others. Failure to follow these instructions will likely result in personal injury or death.**



**DANGER**

**This signal word is used to identify a hazard which, if not avoided, will result in death or serious injury.**



**WARNING**

**This signal word is used to identify a hazard which, if not avoided, could result in death or serious injury.**



**CAUTION**

**This signal word is used to identify a hazard which, if not avoided, could result in minor or moderate injury.**

**NOTICE**

**This signal word is used to identify a hazard which, if not avoided, could result in property or equipment damage. It also may be used for special instructions related to performance, maintenance or general items.**

# SAFETY PRECAUTIONS



## DANGER

**Failure to obey the following safety instructions will result in DEATH or SERIOUS INJURY.**

Stay clear of auger while machine is in operation. Keep all body parts, clothing, jewelry and solid objects away from all moving parts.

Never run Grout Hog® with end cap removed.



## WARNING

**Failure to obey the following safety instructions could result in DEATH or SERIOUS INJURY.**

Read and understand entire manual before operating the Grout Hog®.

For your safety and the safety of others, replace any missing or damaged warning decals by contacting the manufacturer at 1-800-417-9272.

Make sure anyone operating the Grout Hog® is thoroughly familiar with its operation. Keep all unauthorized and untrained personnel, especially children away from Grout Hog®.

Never operate machine with guards or safety devices removed. Do not alter any safety guards.

Never perform any work on the Grout Hog® while it is running. Before working on or cleaning the Grout Hog®, shut off engine and disconnect hydraulic supply hoses.

Never operate the Grout Hog® under the influence of alcohol, drugs, or medications.

This Grout Hog® has been designed and built as a material delivery station, and should not be used for anything other than its intended purpose.

Consult forklift manufacturers specifications to insure load capacity is not exceeded.

Model	Empty Weight	Max Gross Weight
GPH75	1436lbs.(651.4kg)	4436lbs.(2012.1kg)
GPHC75	1525lbs.(691.7kg)	4526lbs.(2052.5kg)

Do not exceed Maximum Gross Weight

Always use skid pins and lynch pins or safety chains whenever Grout Hog® is on lift forks.

Never stand under an elevated Grout Hog®.

Never attempt to ride the Grout Hog®.

# SAFETY PRECAUTIONS



## **WARNINGS continued**

The Grout Hog® is intended for use with a supervised hold to run control. If used outside of this scope call the EZG Manufacturing for optional grate to cover hopper.

Avoid breathing dust produced while using the Grout Hog®. Dust may contain crystalline silica and may cause serious health problems.

Do not operate near combustible materials.

Always know the location of nearest fire extinguishers, first aid kit, and emergency personnel phone numbers in case of emergency.



## **CAUTION**

**Failure to obey the following safety instructions could result in MINOR or MODERATE INJURY.**

Inspect all hoses, fasteners, bolts and welds for nicks, cracks, cuts, damage, wear or looseness before each use. Repair as needed.

Always wear approved PPE, including glasses, hearing protection, hard hats, and ventilation masks when operating a Grout Hog®.

Do not use the Grout Hog® as a lifting device or with accessories or attachments not recommended by EZG Manufacturing, as damage to equipment or operator might result.

Avoid contact with hot hydraulic fluid.

Allow system to cool before performing any repairs or service.

## ***NOTICE***

Use only factory authorized parts.

Used lubricants such as engine and hydraulic oil, and hazardous waste must be taken to an authorized disposal or recycling center.

## California - Proposition 65 Warning

Engine exhaust and some of its constituents, and some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects and other reproductive harm. Some examples of these chemicals are:

Lead from lead based paints - Crystalline silica from bricks -Cement and other masonry products -Arsenic and chromium from chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: ALWAYS work in a well ventilated area, and work with approved safety equipment, such as dust masks that are specially designed to filter out microscopic particles.

## OPERATING INSTRUCTIONS

 **Warning! This equipment is to be operated by trained and qualified personnel over the age of 18. Death or serious injury can result.**

Before operating the Grout Hog® it should be properly set up on the jobsite. The Grout Hog® may be lifted by using a forklift. The GPH75 weighs 1436 lbs.(651.4kg) empty and 4436lbs.(2012.1kg) full and the GPHC75 weighs 1525lbs.(691.7kg) empty and 4526lbs.(2052.5kg) full. Check forklift ratings before attempting to move the Grout Hog®.

1. Start engine (see Honda owner's manual page 15). Let engine run for 5 minutes and turn off.
2. Slide lift forks into lifting channels on Grout Hog®.
3. Insert skid pins into lift channels behind lift forks and secure with locking pins or use chain attachment.

 **Warning! Pins must be in place whenever Grout Hog® is on lift forks. Death or serious injury can result.**

4. Set Grout Hog® securely on ground. Fill to desired capacity.

 **Warning! Check forklift or crane manufacturer's specifications to be sure forklift or crane is designed to handle weight of Grout Hog® and material in hopper. Death or serious injury can result.**

5. Transport Grout Hog® to desired location. Start engine, fully open throttle, and raise above grouting level.
6. Hold discharge hose over area to be grouted.
7. Discharge grout to desired areas until hopper is empty. (Repeat steps 4-7 as needed)
8. To regulate grout flow, squeeze discharge hose; to momentarily stop grout flow, crimp or fold hose.
9. To stop flow for extended period, push reverse on pendant switch until valve closes then release button, and hang on hook provided.

**NOTICE: In the unlikely event that the auger plugs, momentarily push the reverse button on the pendant switch.**

# CLEANUP



**Caution! Before performing any described maintenance items, make sure engine is off. Death or serious injury can result.**

1. Set Grout Hog® securely on ground. Turn off and remove ignition key. Remove skid pins or chains before backing away.
2. Remove end cap from auger tube.
3. Grasp auger handle firmly and pull auger straight out of tube.
4. Hose out and brush down hopper, then spray out and brush down auger until all excess grout is removed.
5. Flush discharge hose until clean.
6. Slide auger back in Grout Hog® so that it fits securely in place. Install the end cap back on tube.



**Danger! Never run machine with end cap removed.. Death or serious injury will result.**

7. Grease the fittings using EPI rated or equivalent grease. There are 4 grease fittings on the Grout Hog®, they are identified on the parts list by #62.

Following each use, it is a good idea to apply a thin layer of lubricant to the inside of the hopper to make cleaning easier.

**Notice! Do not use so much lubricant that it might stain block work at beginning of next use.**

If equipped with crane bail, inspect crane bail, hopper, and base for cracked welds, loose bolts, and wear before each use. Repair or replace if needed.

## OBTAINING SPARE PARTS

Spare parts for your Grout Hog® may be obtained by the following procedure:

1. Record the information from the serial number tag located on the frame.
2. Using the parts reference table in this manual, record the part number or component.
3. Contact your local Grout Hog® dealer or EZG Manufacturing at 1-800-417-9272 with the information recorded.

# TROUBLE SHOOTING


Symptom	Potential Cause	Possible Solution
Auger will not turn	Low hydraulic fluid	Add hydraulic fluid
	Hard concrete around auger	Clean auger
	Ice in hopper	Clean hopper
	Discharge hose plugged	Clean hose
	Pendant or cord Damaged	Inspect, replace if needed
	Blown fuse	Replace fuse
Hopper unloading slowly	Wrong gasket in auger tube	Replace 1 1/4" I.D. Gasket with 6 5/8" I.D. Gasket
	Discharge hose kinked	Lift hopper to higher elevation
	Discharge hose damaged	Replace discharge hose
	Auger turning in reverse	Press other hold to run button on pendant
	Auger worn	Replace auger
Concrete leaking from back of machine	Continuous use without grease	Replace rubber seal and power shaft adapter
Grout continues to flow when auger is stopped	Valve not closing	Hold reverse button momentarily to close valve
Hopper is difficult to swivel by pulling on discharge hose	Lack of grease	Grease spindle
	Faulty support rollers	Replace support rollers

NOTE: To override pendant switch and unload hopper, push manual override button located under motor guard on back of machine.

Maintenance Chart		First 100 Hours	After Use	Before Starting Motor	Every Time After Refueling	Before Starting Work	Monthly	Annually or 300 Hours	In The Event Of Malfunction	If Damaged	Refer To Honda Owners Manual Supplied with Machine
Complete Machine	Visual Inspection Condition			X	X						
	Clean		X	X							
Hydraulic Filter	Replace	X						X		X	
	Check			X							
Hydraulic Oil (5-10W energul HPD-HD or equivalent)	Replace	X						X			
	Maintenance Repair & Safety										X
Hydraulic Hoses & Discharge Hose	Replace							X	X		
	Check			X							
Auger	Replace								X		
	Clean		X								
Warning Decals	Replace								X		
	Clean		X			X					
Emergency Stop	Functional Test				X						
	Replace							X	X		
Pendant Switch	Functional Test				X						
	Replace							X	X		
End Cap & Rear Seal	Grease		X	X	X						
	Replace							X	X		
Center Spindle	Grease					X					
Battery	Replacement										X




# WARNING LABELS AND LOCATIONS

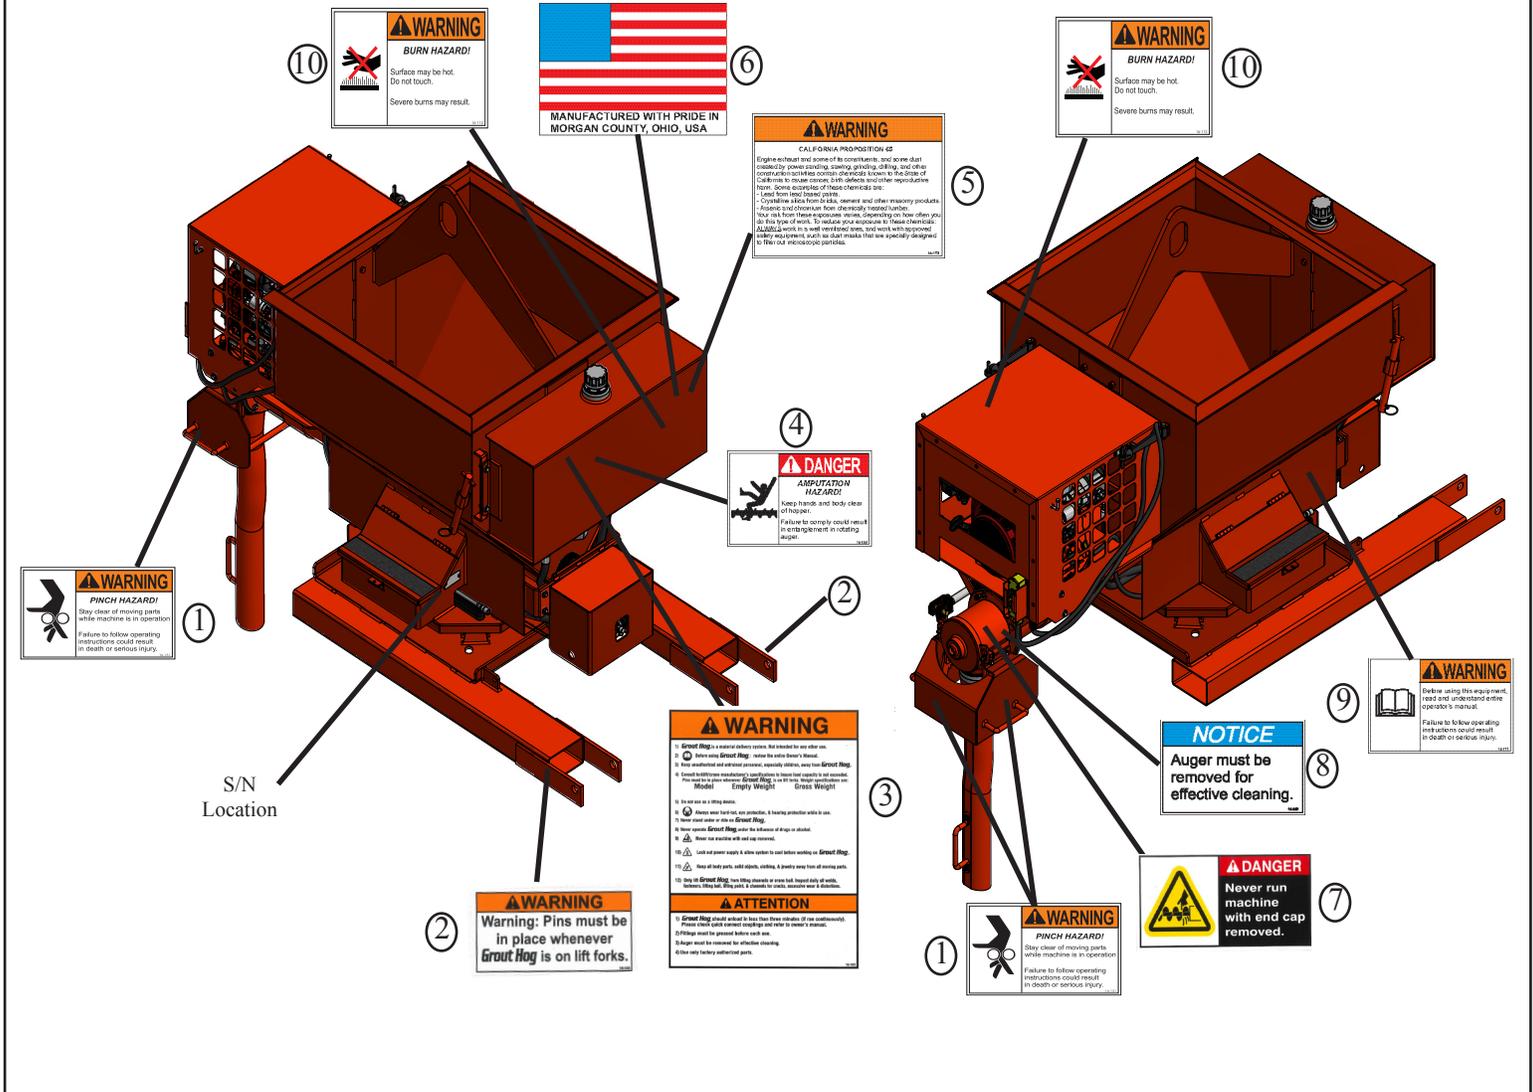


ITEM	PART NUMBER	DESCRIPTION	QTY
1	16-131	Small Pinch Point Decal	3
2	16-133	Pins Must be in Place Decal	2
3	16-195	Grout Hog Weight Decal	1
4	16-104	Danger - Amputation Decal	1
5	16-193	Proposition 65 Decal	1
6	16-106	U.S. Flag Decal	1
7	16-105	Danger - End Cap Decal	1
8	16-200	Remove Auger for Cleaning Decal	1
9	16-177	Read Owners Manual Decal	1
10	16-112	Hot Surface	2


# GRP75 & GRPC75 GROUT HOG - ASSEMBLY p. 1

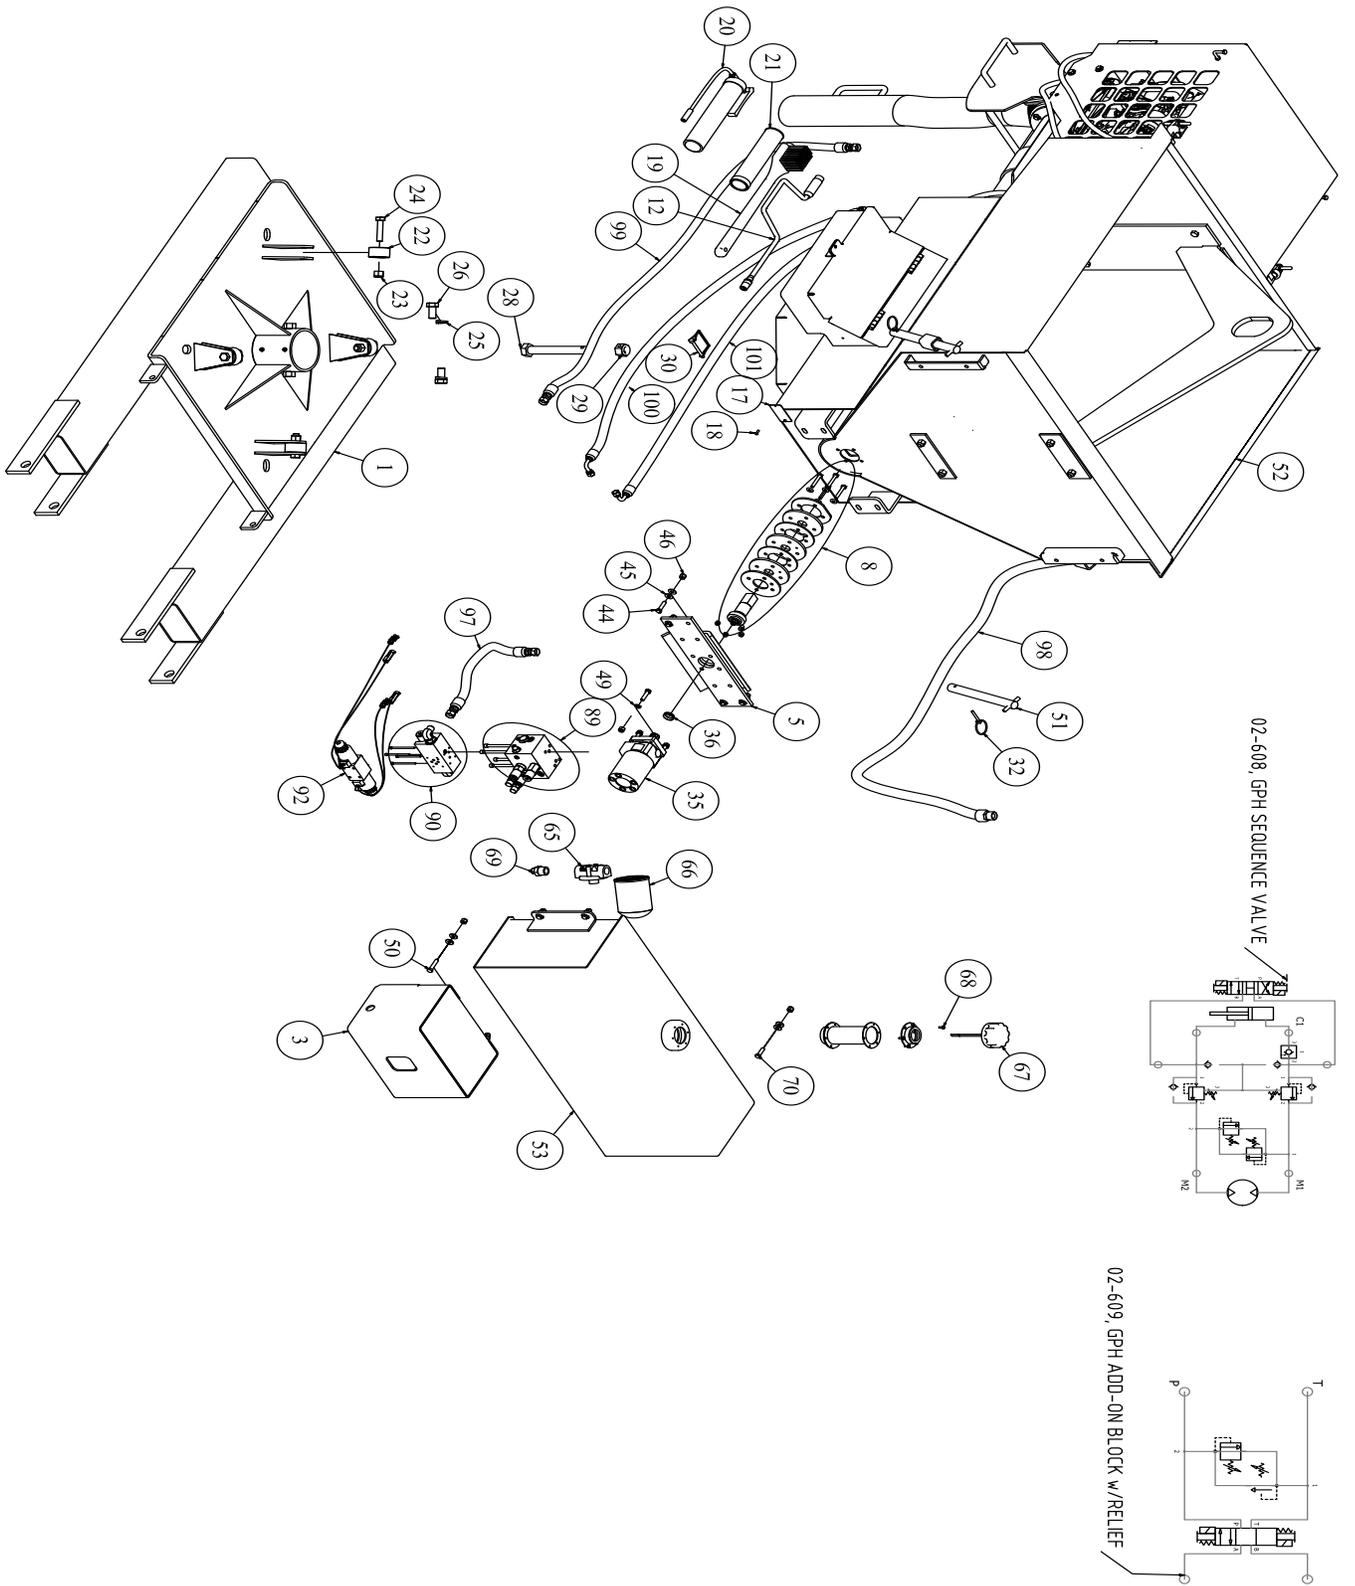

# GP75 & GP75C75 GROUT HOG - ASSEMBLY p.2

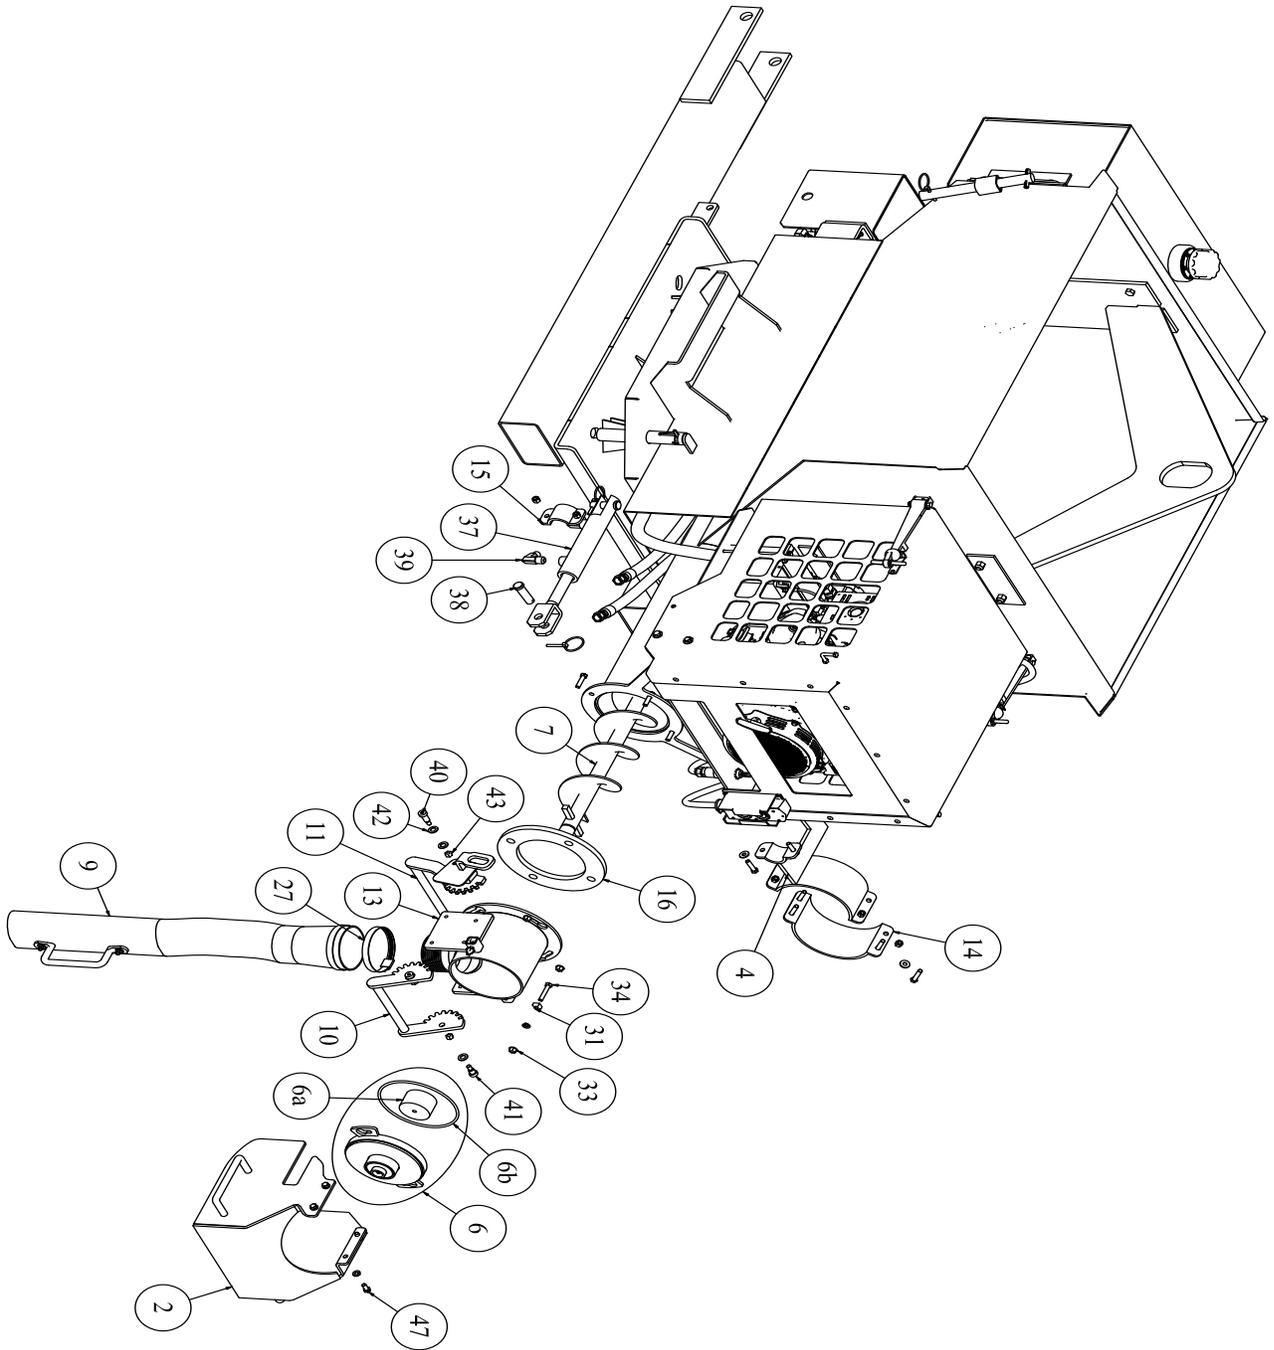



PARTS LIST				PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION	ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	GH-A-2	GH75 Base	53	1	GPH-A-1	GPH-16 Gal. Hydraulic Tank
2	1	GH-A-10	GH-7" Tube-Shout Guard Assembly	54	1	GPH-A-2	GPH-Engine Hood Assembly
3	1	GH-A-11	GH-Hydraulic Motor Guard Assembly	55	1	MH12-8	MH12-8 Hood-Engine Isolation Plate
4	1	GH-A-12	GH-7" Tube Shut-off Cylinder Mount Assembly	56	2	20-103	Hood Hold Down Strap
5	1	GH-A-13	GH-Hydraulic Motor Mount Plate Welded	57	2	20-139	9541K310-24 Rubber Bumper
6	1	GH-A-17	GH-7" End Cap w/Bushing	58	4	02-803	2-Piece Vibration Mount Neoprene
6a	1	15-100	Auger Shaft Bushing 2.5" OD x 1.36" ID	59	4	09-314	3/8"-16 x 2 1/2" GR5 Bolt
6b	1	13-109	Groat Hog End Cap O-Ring	60	8	09-114	3/8" x 1 1/2" Fender Washer
7	1	GH-A-16	GH-Auger (4 7/8" x 65 7/8")	61	2	09-224	#10-24 Hex Nut
8	1	GH-A-26-A	GH-Rear Seal Kit for BOMs	62	2	09-306B	5/16"-18 x 3" GR5 Bolt
9	1	GH-A-27	GH-8" Discharge Hose w/Handle	63	2	09-203	5/16"-18 Nut
10	1	GH-A-42	GH-7" Tube Front Snout Shut-off Arm	64	3	09-202	5/16"-18 Nylon Nut
11	1	GH-A-43	GH-7" Tube Rear Snout Shut-off Arm	65	1	02-315	Filter Head 3/4" NPT
12	1	GH-A-6	GH-Speed Wrench Assembly	66	1	02-316	Hydraulic Filter
13	1	GH-A-9	GH-7" Snout w/4" Discharge	67	1	02-318	Hydraulic Fill Cap/Breather
14	1	SS-15-P	Snout Shut-off Tube Strap 7"	68	6	09-352	#10-32 x 1/2" Thread Cutting Screw Type F
15	1	SS-11-P	Snout Shut-off Cylinder Mount Strap	69	1	02-204	1/2" JICM to 3/4" NPTM Adaptor
16	1	13-101	Groat Hog 10" OD x 6 5/8" ID x 1/2" T Gasket	70	12	09-310	3/8"-16 x 1 1/4" GR5 Bolt
17	1	20-126	Blank Metal Plates	71	2	09-384	1/4"-20 x 7 1/2" GR2 Bolt
18	6	20-105	Rivets for Name Plates	72	6	09-104	1/4" Flat Washer
19	1	11-108	Cleaning Brush	73	4	09-200	1/4"-20 Nylon Nut
20	1	11-119	Pistol Grease Gun w/Whip Hose 18"	74	1	12-115	1 1/2" Blue PVC Layflat Water Discharge Hose
21	1	20-101	Deluxe Xtreme Service Grease (10/lb/ke)	75	1	MH-61	MH12-20 Battery Hold Down
22	4	15-139	RBC Y72L Bearing Support Cam Roller	76	1	03-177	DeKa Trac 225 Battery
23	4	09-210	5/8"-11 Nylon Nut	77	1	09-305	5/16"-18 x 2" GR5 Bolt
24	2	09-319	5/8"-11 X 2 3/4" GR5 Bolt	78	1	14-103	GX390UT2QAE2 Honda Engine -3 AMP
25	2	09-113	3/4" Lock Washer	79	1	02-514	Pump Adaptor- All MH/GPH/UGPH
26	2	09-329	3/4"-10 X 1 1/2" GR8 Bolt	80	1	02-515	DFC-GP-F20-10-P-C Gear Pump GPH-UGPH
27	2	12-100	Groat Hog 4" x 3/8" Hose Clamp	81	1	15-101	Maska 5/8" Bore Coupling
28	1	09-327	1" x 8" GR8 Bolt	82	1	15-102	Maska 1" Bore Coupling
29	1	09-213	1"-8 Nylon Nut	83	1	15-118	Elastomeric Coupling Spider
30	1	09-407	5/16" Latch Pin	84	1	02-259	3/4" JICM to 3/4" ORM 45 DEG Adaptor
31	2	09-206	3/8"-16 x 5/8" Square Nut	85	1	02-258	1/2" JICM to 5/8" ORM 90 DEG Adaptor
32	4	09-400	1/4" Linch Pins	86	1	20-120	Model # HON 1412 Drainziti
33	6	09-214	3/8"-16 Flange Nut	87	2	09-322	1/4"-20 x 3/4" GR5 Bolt
34	2	09-339	3/8"-16 x 2" Full Thread Bolt	88	1	20-152	EZ Groat Corporation/Kevchain-Hog
35	1	02-415	Groat Hog Parker Hydraulic Motor	89	1	02-608	GPH-Sequence Valve
36	1	13-115	V-Ring, Dust Seal for GH Hydraulic Motor	90	1	02-609	GPH-Add-on Block w/Relief
37	1	02-703	Groat Hog Cylinder 1 1/2" Bore x 4" Stroke	91	1	03-510	1/2" Steel Locknut
38	2	09-428	Clevis Pin 3/4" x 2 1/2"	92	1	02-625-A-1	GPH-Argo D03 Valve with Connectors
39	2	02-250	1/2" JICM TO 3/8" NPTM 90 DEG Adaptor	93	1	GPH-A-26	GPH-Fuse Holder Assembly
40	1	09-349	1/2" x 1" x 3/8" Thread-Shoulder Screw	94	1	GPH-A-23	GPH-Female Screw Conn. w/ 3 Connectors
41	3	09-334	1/2" x 1 1/2" x 3/8" Thread-Shoulder Screw	95	1	GPH-A-22	Woodhead Cont w/ Coil Cord & Screw on Conn.
42	5	09-119	Shim 3/40" Thick x 1/2" ID x 7/8" OD	96	1	GPH-A-25	GPH-Wire Harness for Argo Valve
43	4	09-205	3/8"-16 Nut	97	1	GPH-A-17	GPH-V to T Hose
44	14	09-308	3/8"-16 x 2" GR5 Bolt	98	1	GPH-A-15	GPH-T to T Hose
45	56	09-105	5/16" Flat Washer	99	1	GPH-A-16	GPH-P to V Hose
46	33	09-204	3/8"-16 Nylon Nut	100	1	GH-A-23	GH-Cylinder Hose Assembly-Left V to C
47	6	09-355	3/8"-16 x 3/4" GR5 Bolt	101	1	GH-A-23	GH-Cylinder Hose Assembly-Right V to C
48	7	09-312	3/8"-16 x 2" GR5 Bolt	102	1	MH-A-85	MH12/20 Negative Battery Cable 18"
49	16	09-102	3/8" Lock Washer	103	1	MH-A-86	MH12/20 Positive Battery Cable 28"
50	4	09-311	3/8"-16 x 1 3/4" GR5 Bolt	104	1	03-133	1/4" Wire Loom
51	2	GH-521	GH/UGH Gout Hog-Fork Pin Assembly	105	1	03-174	3/8" Polyloom
52	1	GPH-C-A-4	GPH-C-Hopper Assembly w/ Crane Bale				

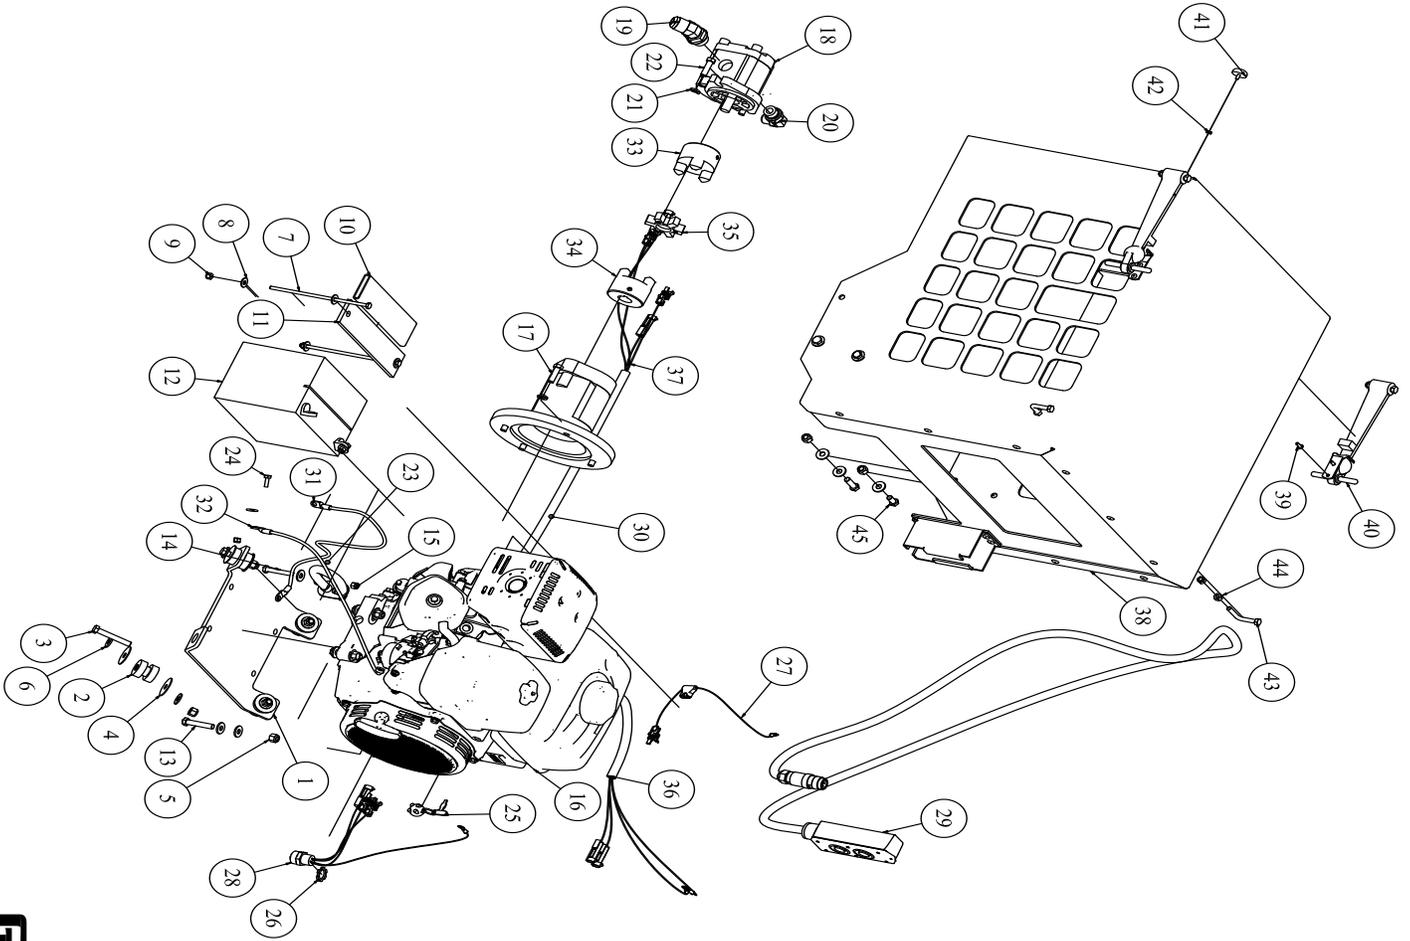

PARTS LIST

ITEM NUMBER	QTY	PART NUMBER	DESCRIPTION
1	1	MH12-8	MH12 Mud Hog-Engine Isolation Plate
2	4	02-803	2-Piece Vibration Mount Neoprene
3	4	09-314	3/8"-16 x 2 1/2" GR5 Bolt
4	8	09-114	3/8" x 1 1/2" Fender Washer
5	11	09-204	3/8"-16 Nylon Nut
6	22	09-105	5/16" Flat Washer
7	2	09-384	1/4"-20 x 7 1/2" GR2 Bolt
8	6	09-104	1/4" Flat Washer
9	4	09-200	1/4"-20 Nylon Nut
10	1	12-115	1 1/2" Blue PVC Layflat Water Discharge Hose
11	1	MH-61	MH 12/20 Battery Hold Down
12	1	03-177	Deka Trac 225 Battery
13	3	09-312	3/8"-16 x 2" GR5 Bolt
14	1	09-305	5/16"-18 x 2" GR5 Bolt
15	3	09-202	5/16"-18 Nylon Nut
16	1	14-103	GX390UT2QAE2 Honda Engine (3 AMP)
17	1	02-514	Pump Adaptor-All MH, GPH, UGPH
18	1	02-515	DFC-GP-F-20-10-P-C Gear Pump GPH-UGPH
19	1	02-259	3/4" JICM to 3/4" ORM 45 DEG Adaptor
20	1	02-258	1/2" JICM to 5/8" ORM 90 Adaptor
21	6	09-102	3/8" Lock Washer
22	8	09-310	3/8"-16 x 1 1/4" GR5 Bolt
23	1	20-120	Model # HON 1412 Drainzit
24	2	09-322	1/4"-20 x 3/4" GR5 Bolt
25	1	20-152	EZ GROUT Corporation Keychain-HOG
26	1	03-510	1/2" Steel Locknut
27	1	GPH-A-26	GPH Fuse Holder Assembly
28	1	GPH-A-23	GPH Female Screw Connector w/3 Connectors
29	1	GPH-A-22	Woodhead Controller w/ Coil Cord & Screw on Connectors
30	1	GPH-A-25	GPH Wire Harness for Argo Valve
31	1	MH-A-85	MH12/20 Negative Battery Cable 18"
32	1	MH-A-86	MH12/20 Positive Battery Cable 28"
33	1	15-101	Maska 5/8" Bore Coupling
34	1	15-102	Maska 1" Bore Coupling
35	1	15-118	Elastomeric Coupling Spidler
36	1	03-133	1/4" Wire Loom
37	1	03-174	3/8" Polyloom
38	1	GPH-A-2	GPH-Engine Hood Assembly
39	4	20-105	Rivets for Name Plates
40	2	20-103	Hood Hold Down Strap
41	2	20-139	954IK3 10-24 Rubber Bumper
42	2	09-224	#10-24 Hex Nut
43	2	09-306	5/16"-18 x 3" GR5 Bolt
44	2	09-203	5/16"-18 Nut
45	2	09-355	3/8"-16 x 3/4" GR5 Bolt


**GROUT HOG - ENGINE ASSEMBLY**

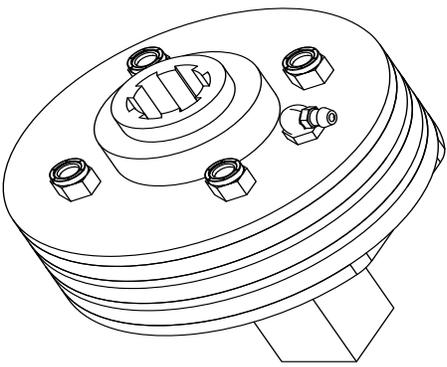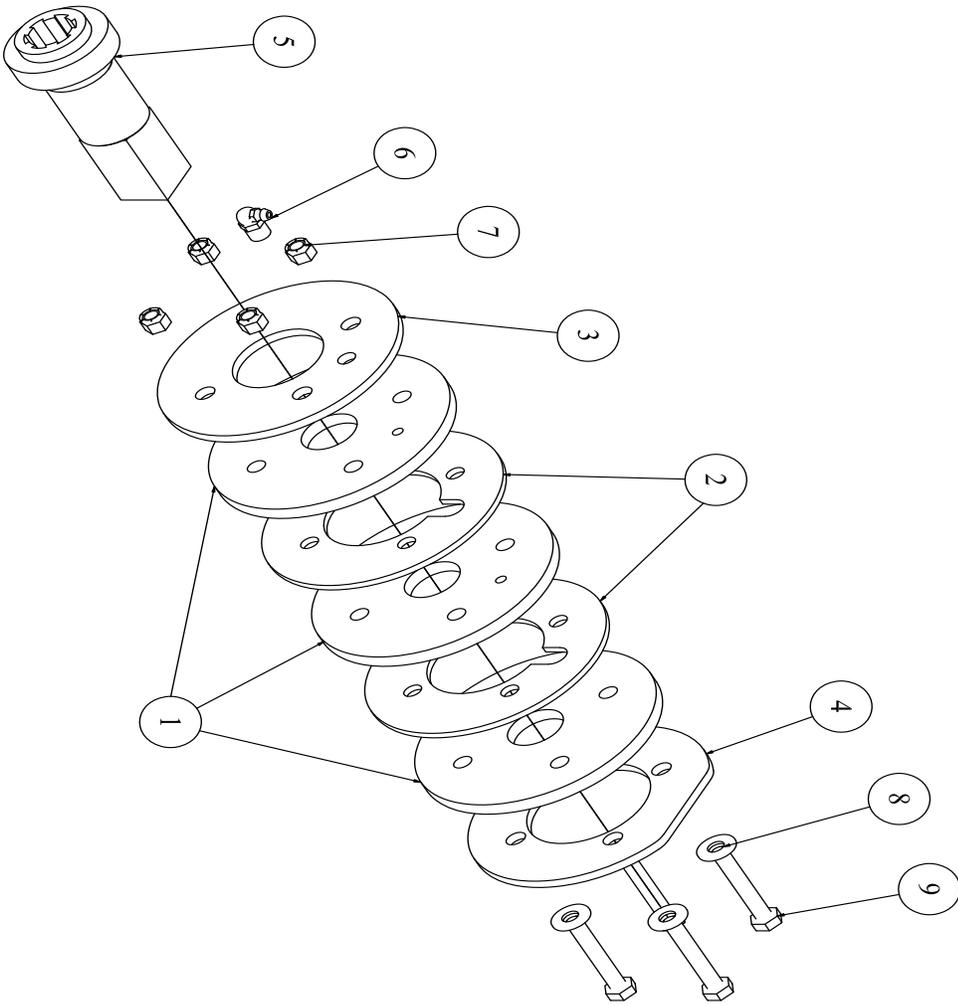


PARTS LIST			
ITEM NUMBER	QTY	PART NUMBER	DESCRIPTION
1	3	13-116	Grout Hog Urethane Shaft Seals
2	2	GH-17	GH-Rear Seal Intermediate Plate, Spacer
3	1	GH-18	GH-Rear Seal Outer Seal Plate
4	1	GH-31	GH-Rear Seal Inner Plate
5	1	GH-A-25	GH-Power Shaft Connector
6	1	09-600	1/8" 90 Deg. Grease Fitting
7	4	09-202	5/16"-18 Nylon Nut
8	4	09-104	1/4" Flat Washer
9	4	09-305	5/16"-18 x 2" GR5 Bolt

# GROUT HOG - SEAL KIT

**GPHC-A-1 (Crane Bale w/Mounting Hardware)**

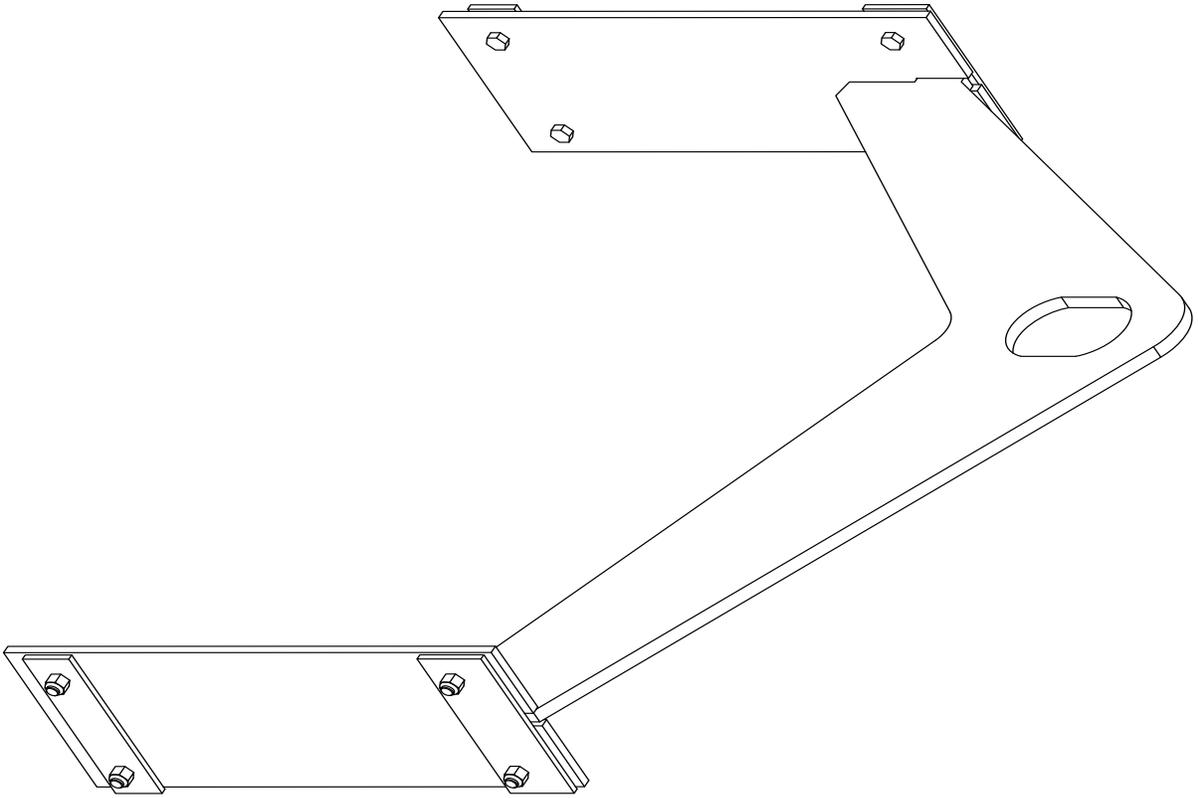

**GPH-A-30 (GPH Wireless Remote Complete Assembly)**

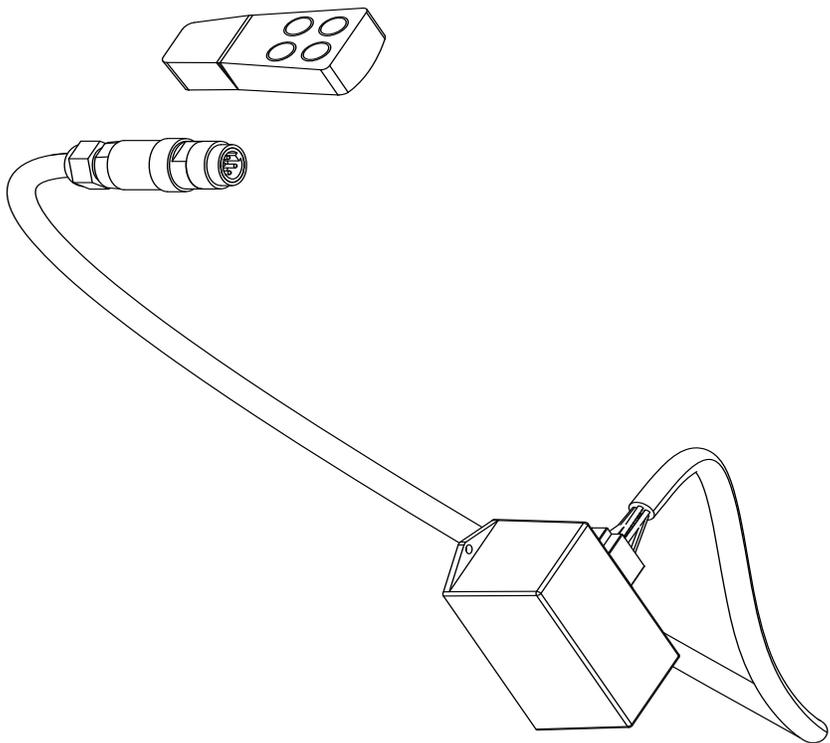

**GPH75 & GPHC75 GROUT HOG - Options**



# WARRANTY

## Limited Warranty

The manufacturer warrants that products manufactured shall be free from defects in material and workmanship that develop under normal use for a period of one year on all products from the date of shipment. The foregoing shall be the exclusive remedy of the buyer and the exclusive liability of the manufacturer. Our warranty excludes normal replaceable wear items, i.e. gaskets, wear parts, seals, O-rings, belts, drive chains, clutches, etc. Any equipment, part or product which is furnished by the manufacturer but manufactured by another, bears only the warranty given by such other manufacturer. (Manufacturer agrees to furnish free of charge a written description of problem or cause.) Warranty is voided by product abuse, alterations, use of equipment in applications for which it was not intended, use of non-manufacturer parts, or failure to follow documented service instructions. The foregoing warranty is exclusive of all other warranties whether written or oral, expressed or implied. No warranty of merchantability or fitness for a particular purpose shall apply. The agents, dealers, and employees of Manufacturer are not authorized to make modifications to this warranty, or additional warranties binding on the Manufacturer. Therefore, additional statements, whether oral or written, do not constitute warranty and should not be relied upon.

The Manufacturer's sole responsibility for any breach of the foregoing warranty provisions, with respect to any product or part not conforming to the Warranty or the description herein contained, is at its option (a) to repair, replace, or refund such product or parts upon the prepaid return thereof to location designated specifically by the Manufacturer. Product returns not shipped prepaid will be refused (b) as an alternative to the foregoing modes of settlement- the Manufacturer's dealer may repair defective units with reimbursement for expenses. A written description of problem or cause must accompany all warranty claims.

Except as set forth here in above and without limitation of the above, there are no warranties or other affirmation which extend beyond the description of the products on the fact here of, or as to operational efficiency, product reliability, or maintainability or compatibility with products furnished by others. In no event, whether as a result of breach of contract or warranty or alleged negligence, shall the Manufacturer, be liable for special or consequential damages including but not limited to: Loss of profits or revenue, loss of use of the product or any associated product, cost of capital, cost of substitute products, facilities or services or claims of customers. Manufacturer does not assume responsibility for any accident due to equipment modification.

No claim will be allowed for products lost or damaged in transit. Such claims should be filed with the carrier within fifteen days.

Effective July 20, 2005

EZG Manufacturing is the exclusive manufacturer of the patented Grout Hog® Grout Delivery System the Mud Hog® Hydraulic Mixing Station, the Hog Trough® mud pan, the Hog Cart™, the Hog Slopper™, the Booger Hog® Wall Scrubber, the Hog Leg® Wall Brace System, and the Hog Crusher™ Material Recycling System.

Fax Warranty Registration form to 740-962-2037  
or submit online at [www.ezgmfg.com](http://www.ezgmfg.com) by clicking on  
“Products” then “Warranty Cards”.

## WARRANTY REGISTRATION

CONTACT: \_\_\_\_\_

COMPANY: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

CITY: \_\_\_\_\_ STATE: \_\_\_\_\_ ZIP: \_\_\_\_\_

TEL: (\_\_\_\_) \_\_\_\_\_ - \_\_\_\_\_ FAX: (\_\_\_\_) \_\_\_\_\_ - \_\_\_\_\_ CELL: (\_\_\_\_) \_\_\_\_\_ - \_\_\_\_\_

EMAIL: \_\_\_\_\_

PURCHASED FROM:  Direct  Distributor: \_\_\_\_\_

PURCHASE DATE: \_\_\_\_\_ SERIAL NO. \_\_\_\_\_

**PLEASE COMPLETE THIS WARRANTY CARD, AND RETURN VIA MAIL, FAX, OR E-MAIL,  
WITHIN 30 DAYS OF PURCHASE TO VALIDATE YOUR MANUFACTURER'S WARRANTY  
FOR ALL EZG MANUFACTURING PRODUCTS.**

**WARRANTY PROVISIONS OF THIS MACHINE ARE HANDLED DIRECTLY THROUGH  
THE MANUFACTURER.**

**EZG MANUFACTURING \* 1833 North Riverview Road, Malta, OH 43758 \***

**PHONE 1-800-417-9272 \* Email: [warranty@ezgmfg.com](mailto:warranty@ezgmfg.com) \* FAX 740-962-2037**

*Please take a minute to fill out the survey below so that we can better serve our customers.*

## EZ Survey

**1. WHERE DID YOU FIRST HEAR ABOUT EZG MANUFACTURING? (CHECK ONE)**

Masonry Magazine  Website  Newsletter  Referral  Masonry Construction

Other: \_\_\_\_\_

**2. WHAT INFLUENCED YOU TO BUY?  QUALITY  PRICE  EASY TO USE  OTHER**

**3. WHO IS YOUR SALES REPRESENTATIVE? \_\_\_\_\_**

**4. ARE YOU SATISFIED WITH THE CUSTOMER SERVICE YOU RECEIVED?  YES  NO**

**Explain:** \_\_\_\_\_

**5. WHAT OTHER EZG MANUFACTURING PRODUCTS DO YOU OWN?**

\_\_\_\_\_  
\_\_\_\_\_

**6. WOULD YOU LIKE TO BE FEATURED IN OUR NEWSLETTER?  YES  NO**

**If yes, where can we reach you and what is the best time?**

\_\_\_\_\_  
\_\_\_\_\_

**Comments:** \_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_